


	MX10	MX15	MX20	MX25
<b>DIMENSIONAL DATA</b>				
<b>A - Machine Width</b>	96" (2438 mm)	96" (2438 mm)	120" (3048 mm)	120" (3048 mm)
<b>B - Machine Depth</b>	38" (965 mm)	38" (965 mm)	38" (965 mm)	38" (965 mm)
<b>C - Machine Height</b>	75" (1905 mm)	85" (2159 mm)	75" (1905 mm)	85" (2159 mm)
<b>D - Horizontal Opening</b>	48" (1219 mm)	48" (1219 mm)	72" (1828 mm)	72" (1828 mm)
<b>E - Vertical Opening</b>	23" (584 mm)	23" (584 mm)	23" (584 mm)	23" (584 mm)
<b>F - Floor to Lift Table Load Height</b>	41" (1041 mm)	41" (1041 mm)	41" (1041 mm)	41" (1041 mm)
<b>Lift Table Bed - Front to Back</b>	22" (558 mm)	22" (558 mm)	22" (558 mm)	22" (558 mm)
<b>Lift Table Stroke</b>	20" (508 mm)	20" (508 mm)	20" (508 mm)	20" (508 mm)
<b>Vibration Platen</b>	37.75" x 14.75" (958 mm x 374 mm)	37.75" x 14.75" (958 mm x 374 mm)	37.75" x 14.75" (958 mm x 374 mm)	37.75" x 14.75" (958 mm x 374 mm)
<b>POWER DATA</b>				
<b>Maximum Clamp Force</b> (Less Lower Fixture Weight)	5,000 lbs. (22.2 kN)	5,000 lbs. (22.2 kN)	5,000 lbs. (22.2 kN)	5,000 lbs. (22.2 kN)
<b>10 Horsepower</b> (7.45 kW)	Standard	Standard	Standard	Standard
<b>20 Horsepower</b> (14.90 kW)	Optional	Optional	Optional	Optional
<b>Output Frequency Range</b>	200 to 250 Hz.	200 to 250 Hz.	200 to 250 Hz.	200 to 250 Hz.
<b>Amplitude Range</b>	.040" to .070" (1 mm to 1.78 mm)	.040" to .070" (1 mm to 1.78 mm)	.040" to .070" (1 mm to 1.78 mm)	.040" to .070" (1 mm to 1.78 mm)
<b>WEIGHT DATA</b>				
<b>Approximate Gross Weight</b>	7,500 lbs. (3401 kg)	8,000 lbs. (3628 kg)	8,500 lbs. (3854 kg)	9,000 lbs. (4081 kg)
<b>Upper Tool Weight - Standard Springs</b>	90 lbs. (41 kg) Max	90 lbs. (41 kg) Max	90 lbs. (41 kg) Max	90 lbs. (41 kg) Max
<b>Upper Tool Weight - Heavy Springs</b>	120 lbs. (54 kg) Max	120 lbs. (54 kg) Max	120 lbs. (54 kg) Max	120 lbs. (54 kg) Max
<b>UTILITY REQUIREMENTS</b>				
<b>Electrical</b>	480 VAC - 3 PH. 50/60 Hz 25 Amps 15 kVa	480 VAC - 3 PH. 50/60 Hz 25 Amps 15 kVa	480 VAC - 3 PH. 50/60 Hz 25 Amps 15 kVa	480 VAC - 3 PH. 50/60 Hz 25 Amps 15 kVa
<i>(Other Electrical Voltages Available)</i>				
<b>Pneumatic/Air</b>	80 PSI Min	80 PSI Min	80 PSI Min	80 PSI Min



MX10 Vibration Welder

**Design** Sonics' MX Series Linear Vibration Welders are designed for assembling large and/or complex shaped thermoplastic parts. The machines can also be tooled to assemble multiple smaller parts simultaneously. The MX Series can bond virtually all thermoplastic materials, whether injection molded, extruded, formed or thermoformed. Dissimilar materials (with compatible melting points), materials with fillers as well as composite materials and fabrics can also be bonded.

**Process** The process of vibration welding is based on simple physics. One part is held stationary in a lower tool. Under applied pressure, the mating part is vibrated against the stationary part in a linear direction. This combination of linear motion and pressure creates friction, which in turn, generates heat in the weld joint. The friction brings the two parts to their melt temperatures and bonding occurs.

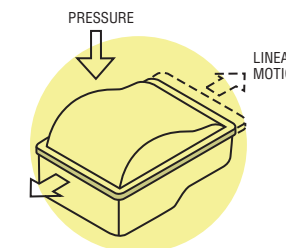

**Machine** Each MX Series Vibration Welder features an industrial computer with a Windows™ based operating system and touch panel operator interface to program and monitor all parameters of the system, insuring quality, consistency and ease in setup and use.

Sonics' patented AUTO-TUNE feature allows the system to detect, set and lock the upper tool's optimum frequency in seconds. This facilitates maximum efficiency with minimal power to drive the tool at its pre-set amplitude.

### Applications

- Carpet and Trim to Interior Automotive Panels
- Automotive Pillars
- Glove Boxes
- Head Lamp Assemblies
- Tail Lamp Assemblies
- Instrument Panels
- Air Intake Manifolds
- Medical Devices
- Fuel Tanks
- Filters

**Corporate Headquarters**  
53 Church Hill Road  
Newtown, CT 06470 USA  
203.270.4600  
800.745.1105  
203.270.4610 fax  
info@sonics.com  
www.sonics.com

**European Office**  
13, Rue Pre-de-la-Fontaine  
CH-1217 Meyrin/Satigny  
Switzerland  
(41) (0) 22/364 1520  
(41) (0) 22/364 2161 fax  
europe@sonicsandmaterials.ch  
www.sonics.com

Sonics vibration welding equipment and tooling is manufactured under one or more of the following U.S. patent numbers:  
6,066,217, 6,227,275, 6,364,977, 6,588,644

